

Saab TransponderTech

Important Notice

R4 Navigation Sensor Installation

The shield of the Navigation Sensor power and data cable (7000 109-011) is connected to the navigation sensor internal ground, referenced to the negative DC supply for the unit. For this reason, the **free end of the cable shield must not be connected to the ship's structure**. For the same reason, don't connect the Navigation Sensor alarm acknowledge ground, the speed log pulse ground or the cable shield for the GPS antenna to the ship's structure.

